 
NozAll^{**} Pump-out Adapter Instructions





- Screw NozAll adapter into deck fitting.
- Insert pump-out station nozzle into NozAll adapter. Begin pumping.

OR

Secure cam coupling around NozAll adapter. Begin pumping.

3. When finished, unscrew NozAll adapter, wash it thoroughly, then store for next use.

T Dometic



Dometic Corporation 13128 State Rt 226 PO Box 38 Big Prairie, OH 44611 1-800-321-9886